



500W 5"×3" Reliable Green Medical Power Supply **RPS-500** series



(Blank type)



(C type)



(TF type)



(SF type)



ANSI/AAMI ES60601-1
UL 62368-1 (except for RPS-500-C)



BS EN/EN60601-1



BS EN/EN62368-1
(except for RPS-500-C)



IEC60601-1 TPTC004
IEC62368-1 (except
for RPS-500-C)



Features

- 5"×3" compact size
- 320W convection, 500W force air
- 550W peak power (3sec.)
- ANSI/AAMI ES60601-1, IEC/BS EN/EN 60601-1 (2 x MOPP) and IEC/EN/UL 62368-1 approved
- EMI for both Class I & Class II configuration
- -30~+70°C wide range operating temperature
- No load power consumption < 0.5W by PS_ON control
- High efficiency up to 94%
- Protections: Short circuit / Overload / Over voltage / Over temperature
- 5Vdc standby output, 12Vdc fan supply, Power Good, Power Fail and remote sense
- Operating altitude up to 4000 meters (Note.5)
- LED indicator for power on
- 3 years warranty

Applications

- Oral irrigator
- Hemodialysis machine
- Medical computer monitors
- Sleep apnea devices
- Pump machine
- Electric bed

GTIN CODE


MW Search: <https://www.meanwell.com/serviceGTIN.aspx>

Description

RPS-500 is a 500W highly reliable green PCB type medical power supply with a high power density on the 5" by 3" footprint. It accepts 80~264VAC input and offers various output voltages between 12V and 48V. The working efficiency is up to 94% and the extremely low no load power consumption is down below 0.5W. RPS-500 (blank type only) is able to be used for both Class I (with FG) and Class II (no FG) system design. The extremely low leakage current is less than 220 μA. In addition, it conforms to international medical regulations (2*MOPP) and EMC BS EN/EN55011, perfectly fitting all kinds of BF rated "patient contact" medical system equipment. RPS-500 series also offers the enclosed style models (-C / TF / SF)

Model Encoding

RPS - 500 - 12 - C

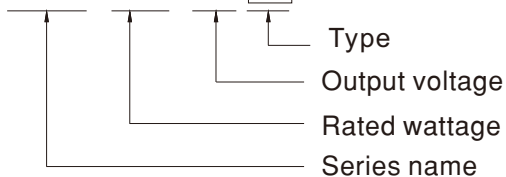

Type	Description	Note
Blank	PCB Type	In stock
-C	Enclosed casing Type	In stock
-TF	Enclosed Type with fan on the top	In stock
-SF	Enclosed Type with fan on the side	In stock



500W 5"×3" Reliable Green Medical Power Supply **RPS-500** series

SPECIFICATION

MODEL			RPS-500-12	RPS-500-15	RPS-500-18	RPS-500-24	RPS-500-27	RPS-500-36	RPS-500-48	
OUTPUT	DC VOLTAGE		12V	15V	18V	24V	27V	36V	48V	
	RATED CURRENT Note.7	Blank	25CFM	41.6A	33.3A	27.8A	20.8A	18.5A	13.9A	10.4A
			Convection	26.7A	21.3A	17.8A	13.4A	11.9A	8.9A	6.7A
		- C	25CFM	41.6A	33.3A	27.8A	20.8A	18.5A	13.9A	10.4A
			Convection	25.8A	20.7A	17.2A	12.9A	11.5A	8.6A	6.5A
		- TF/SF	Built-in fan	41.6A	33.3A	27.8A	20.8A	18.5A	13.9A	10.4A
	RATED POWER Note.7	Blank	25CFM	499.2W	499.5W	500.4W	499.2W	499.5W	500.4W	499.2W
			Convection	320.4W	319.5W	320.4W	321.6W	321.3W	320.4W	321.6W
		- C	25CFM	499.2W	499.5W	500.4W	499.2W	499.5W	500.4W	499.2W
			Convection	309.6W	310.5W	309.6W	309.6W	310.5W	309.6W	312W
		- TF/SF	Built-in fan	499.2W	499.5W	500.4W	499.2W	499.5W	500.4W	499.2W
	PEAK POWER(3sec.)		550W							
	RIPPLE & NOISE (max.) Note.2		200mVp-p	200mVp-p	200mVp-p	200mVp-p	200mVp-p	200mVp-p	200mVp-p	200mVp-p
	VOLTAGE ADJ. RANGE(main output)		11.4~12.6V	14.3~15.8V	17.1~18.9V	22.8~25.2V	25.6 ~ 28.4V	34.2 ~37.8V	45.6 ~50.4V	
	VOLTAGE TOLERANCE Note.3		±3.0%	±3.0%	±3.0%	±2.0%	±2.0%	±1.0%	±1.0%	
	LINE REGULATION		±0.5%	±0.5%	±0.5%	±0.5%	±0.5%	±0.5%	±0.5%	
	LOAD REGULATION		±1.0%	±1.0%	±1.0%	±1.0%	±1.0%	±1.0%	±1.0%	
	SETUP, RISE TIME		1000ms, 30ms/230VAC 1500ms, 30ms/115VAC at full load							
	HOLD UP TIME (Typ.)		10ms/230VAC 10ms/115VAC at full load							
INPUT	VOLTAGE RANGE Note.4		80 ~ 264VAC		113 ~ 370VDC					
	FREQUENCY RANGE		47 ~ 63Hz							
	POWER FACTOR		PF>0.94/230VAC PF>0.98/115VAC at full load							
	EFFICIENCY (Typ.)		91%	92%	92.5%	93%	93.5%	94%	94%	
	AC CURRENT (Typ.)		5.8A/115VAC		2.9A/230VAC					
	INRUSH CURRENT (Typ.)		COLD START		40A/115VAC		80A/230VAC			
	LEAKAGE CURRENT (max.) Note.5		Earth leakage current <220μA/264VAC 50Hz , Touch current < 100μA/264VAC							
PROTECTION	OVERLOAD		105 ~ 135% rated output power							
			Protection type : Hiccup mode, recovers automatically after fault condition is removed							
	OVER VOLTAGE		13.2 ~ 15.6V	16.5 ~ 19.5V	19.8 ~23.4V	26.4 ~ 31.2V	29.7 ~ 35.1V	39.6 ~ 46.8V	52.8 ~ 62.4V	
			Protection type : Hiccup mode, recovers automatically after fault condition is removed							
OVER TEMPERATURE		Protection type : Shut down o/p voltage, recovers automatically after temperature goes down								
FUNCTION	5V STANDBY		5Vsb : 5V@0.6A without fan, 1A with fan 25CFM ; Tolerance ±2%, ripple : 120mVp-p(max.)							
	12V FAN SUPPLY		12V@0.5A for driving fan ; Tolerance -15% ~+10% at main output 20% rated current (25CFM)							
	FAN CONTROL		Fan on by 20% load min. (For RPS-500-xxTF/SF)							
	PS-ON INPUT SIGNAL		Power ON: PS-ON = "Hi" or "> 2 ~ 5V" ; Power OFF: PS-ON = "Low" or "< 0 ~ 0.5V"							
	POWER GOOD / POWER FAIL		500ms>PG>10ms ; The TTL signal goes high with 10ms to 500ms delay after power set up ; The TTL signal goes low at least 1ms before Vo below 90% of rated value							
ENVIRONMENT	WORKING TEMP.		-30 ~ +70°C (Refer to "Derating Curve")							
	WORKING HUMIDITY		20 ~ 90% RH non-condensing							
	STORAGE TEMP.		-40 ~ +85°C							
	TEMP. COEFFICIENT		±0.03%/°C (0 ~ 50°C)							
	VIBRATION		10 ~ 500Hz, 2G 10min./1cycle, 60min. each along X, Y, Z axes							
	OPERATING ALTITUDE Note.6		4000 meters							



500W 5"×3" Reliable Green Medical Power Supply **RPS-500** series


SPECIFICATION

SAFETY & EMC (Note 8)	SAFETY STANDARDS	IEC 60601-1:2005+A1+A2, IEC 62368-1(except for RPS-500-C), TUV BS EN/ EN 60601-1:2006+A1+A2+A2,BS EN/EN 62368-1(except for RPS-500-C), ANSI/AAMI ES60601-1:2005+A2,CAN/CSA C22.2 No. 60601-1:2014+A2, UL 62368-1(except for RPS-500-C), EAC TP TC 004 approved; Design refer to BS EN/EN60335-1(by request)													
	ISOLATION LEVEL	Primary-Secondary: 2xMOPP, Primary-Earth:1xMOPP, Secondary-Earth:1xMOPP													
	WITHSTAND VOLTAGE	I/P-O/P:4KVAC I/P-FG:2KVAC O/P-FG:1.5KVAC													
	ISOLATION RESISTANCE	I/P-O/P, I/P-FG:100M Ohms / 500VDC / 25°C / 70% RH													
	EMC EMISSION	Parameter	Standard			Test Level / Note									
		Conducted emission	BS EN/EN55011 (CISPR11), BS EN/EN55032(CISPR32) (except for RPS-500-C)			Class I : Class B , Class II : Class A									
		Radiated emission	BS EN/EN55011 (CISPR11), BS EN/EN55032(CISPR32) (except for RPS-500-C)			Class A									
		Harmonic current	BS EN/EN61000-3-2			Class A									
		Voltage flicker	BS EN/EN61000-3-3			-----									
	EMC IMMUNITY	BS EN/EN55035 , BS EN/EN60601-1-2, BS EN/EN61204-3													
		Parameter	Standard			Test Level / Note									
		ESD	BS EN/EN61000-4-2			Level 4, 15KV air ; Level 4, 8KV contact									
		RF field susceptibility	BS EN/EN61000-4-3			Level 3, 10V/m(80MHz~2.7GHz) Table 9, 9~28V/m(385MHz~5.78GHz)									
		EFT bursts	BS EN/EN61000-4-4			Level 3, 2KV									
		Surge susceptibility	BS EN/EN61000-4-5			Level 4, 4KV/Line-FG ; 2KV/Line-Line									
		Conducted susceptibility	BS EN/EN61000-4-6			Level 3, 10V									
		Magnetic field immunity	BS EN/EN61000-4-8			Level 4, 30A/m									
		Voltage dip, interruption	BS EN/EN61000-4-11			100% dip 1 periods, 30% dip 25 periods, 100% interruptions 250 periods									
OTHERS	MTBF	1132.3K hrs min. Telcordia SR-332 (Bellcore) ; 144.2K hrs min. MIL-HDBK-217F (25°C)													
	DIMENSION	Type	RPS-500	RPS-500-C	RPS-500-TF	RPS-500-SF									
		L*W*H	127x76.2x41mm 5"x3"x1.61"inch	130x86x43mm 5.11"x3.39"x1.69"inch	130x86x58.5mm 5.11"x3.39"x2.30"inch	160x86x43mm 6.3"x3.39"x1.69"inch									
	PACKING	P.W.	0.46Kg	0.54Kg	0.58Kg	0.64Kg									
		Q'TY	30pcs	24pcs	24pcs	24pcs									
		G.W.	14.8Kg	14Kg	14.9Kg	16.4Kg									
		M'MENT	0.96CUFT	0.77CUFT	0.86CUFT	0.91CUFT									
	NOTE	1. All parameters NOT specially mentioned are measured at 230VAC input, rated load and 25 of ambient temperature. 2. Ripple & noise are measured at 20MHz of bandwidth by using a 12" twisted pair-wire terminated with a 0.1 μ F & 47 μ F parallel capacitor. 3. Tolerance : includes set up tolerance, line regulation and load regulation. 4. Derating may be needed under low input voltages. Please check the derating curve for more details. 5. Touch current was measured from primary input to DC output. 6. The ambient temperature derating of 3.5°C/1000m with fanless models and of 5°C/1000m with fan models for operating altitude higher than 2000m(6500ft). 7. Please refer to "Derating curve". 8. The power supply is considered a component which will be installed into a final equipment. All EMC tests are executed by mounting the unit on a 360mm*360mm metal plate with 1mm of thickness. The final equipment must be re-confirmed that it still meets EMC directives. For guidance on how to perform these EMC tests, please refer to "EMI testing of component power supplies." (as available on https://www.meanwell.com/Upload/PDF/EMI_statement_en.pdf) ※ Product Liability Disclaimer : For detailed information, please refer to https://www.meanwell.com/serviceDisclaimer.aspx													
<table><tr><td>EMI Performance</td><td>Conducted</td><td>Radiated</td></tr><tr><td>Class I (with FG)</td><td>Class B</td><td>Class A</td></tr><tr><td>Class II (no FG)</td><td>Class A</td><td>Class A</td></tr></table>						EMI Performance	Conducted	Radiated	Class I (with FG)	Class B	Class A	Class II (no FG)	Class A	Class A	
EMI Performance		Conducted	Radiated												
Class I (with FG)		Class B	Class A												
Class II (no FG)		Class A	Class A												




500W 5"×3" Reliable Green Medical Power Supply **RPS-500** series

■ Block Diagram

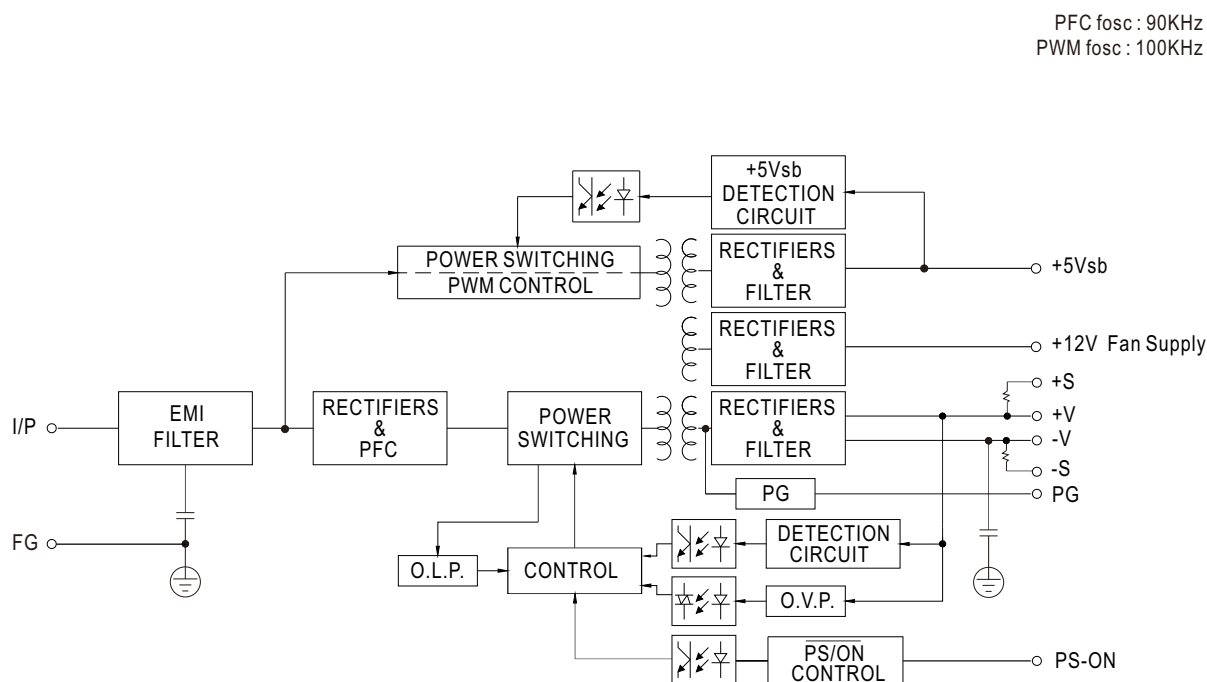

■ Output Derating vs Input Voltage

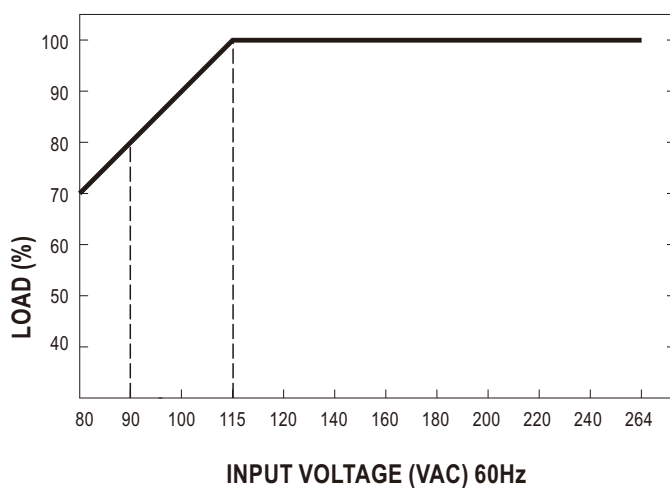





500W 5"×3" Reliable Green Medical Power Supply **RPS-500** series

Derating Curve


RPS-500

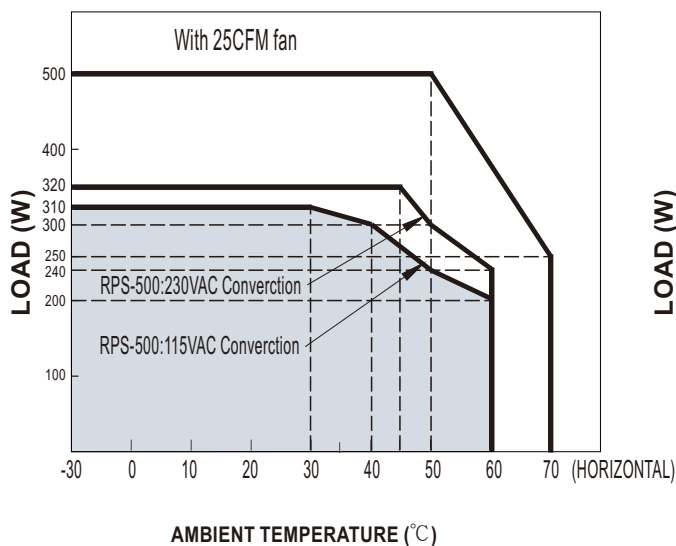

RPS-500-C

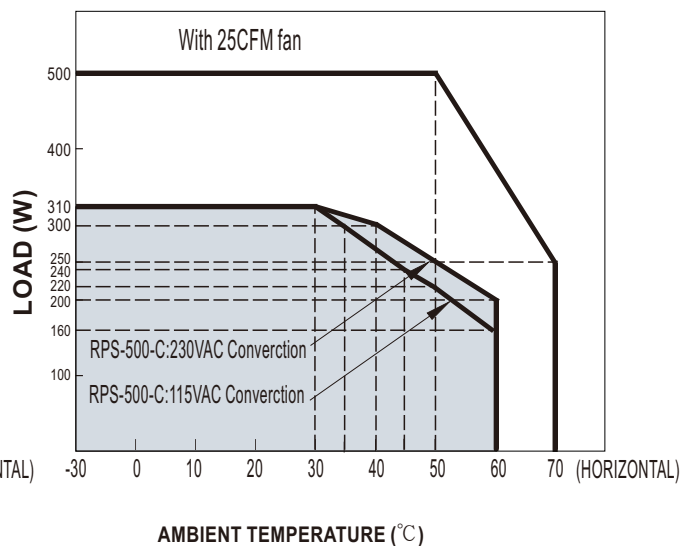

RPS-500-TF/SF

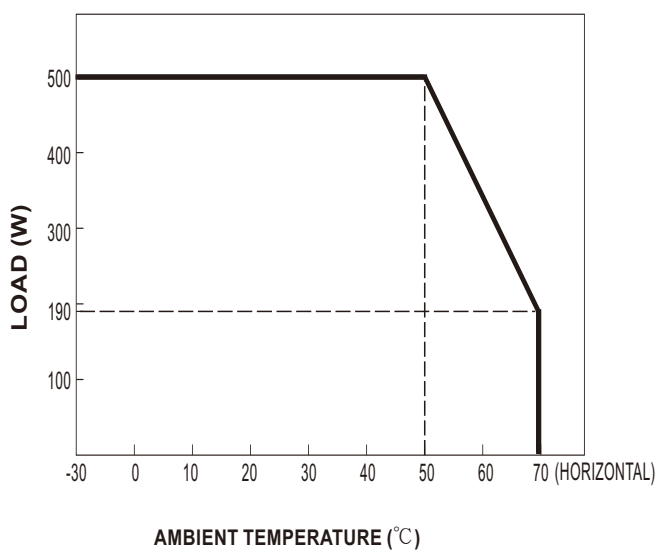

Order No.	RPS-500	RPS-500-C	RPS-500-TF	RPS-500-SF
Products				
Convection	320W	310W	---	---
Force Air	500W	500W	500W	500W




500W 5"×3" Reliable Green Medical Power Supply **RPS-500** series

■ Mechanical Specification

(Unit: mm , tolerance ± 1 mm)

● RPS-500 (PCB Type)






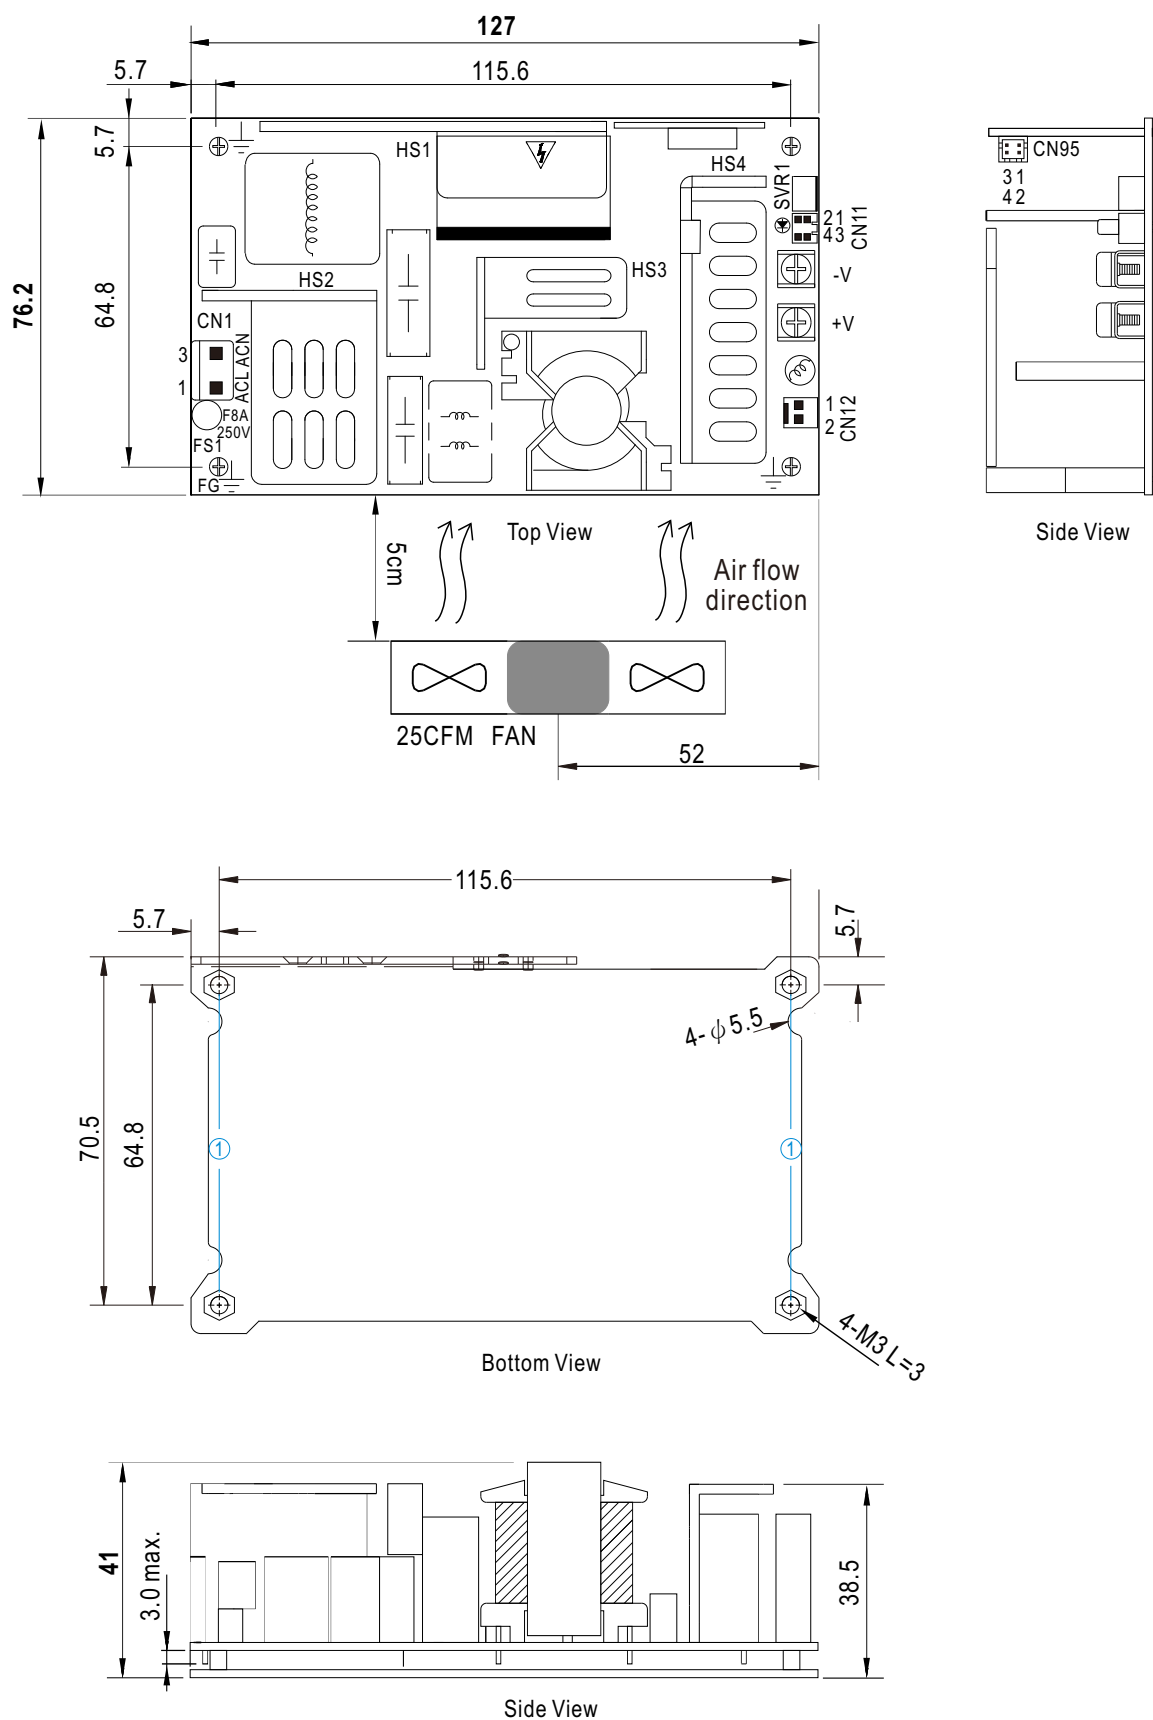





500W 5"×3" Reliable Green Medical Power Supply **RPS-500** series

● RPS-500-C (Enclosed type)

Case No. 247C-T 269A-D

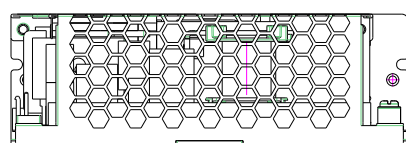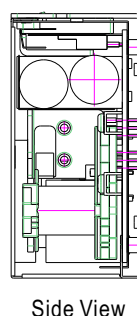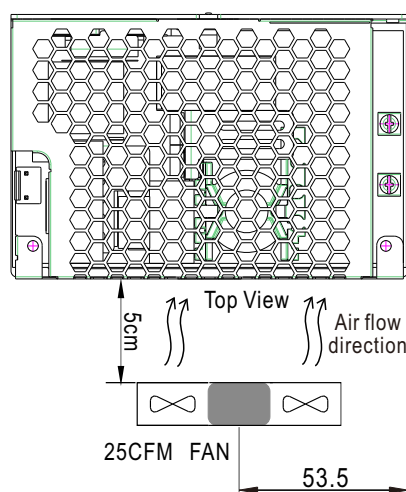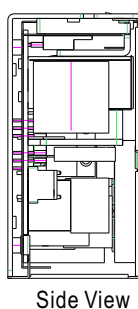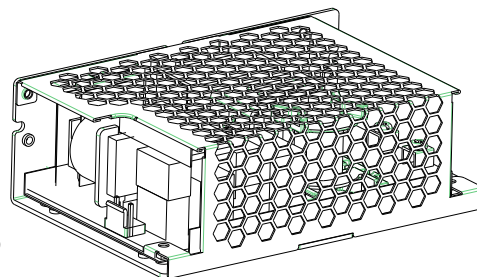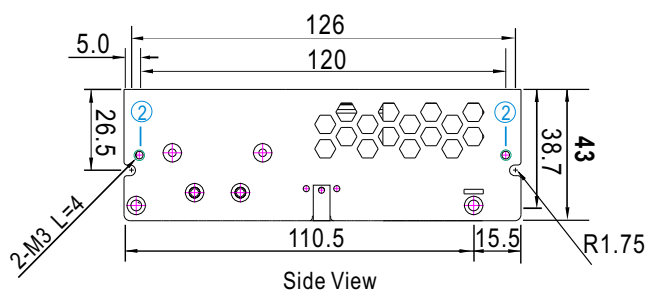

Side View



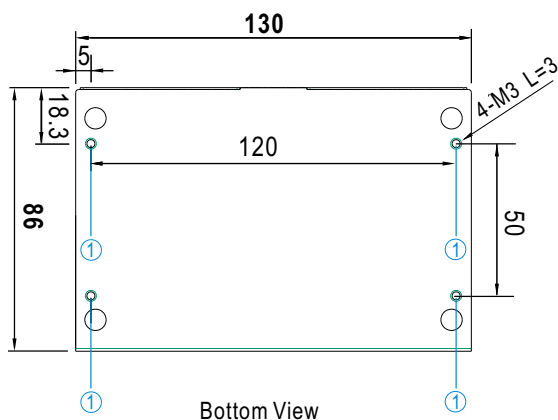





500W 5"×3" Reliable Green Medical Power Supply **RPS-500** series

● RPS-500-TF (Enclosed type with fan on the top)


Case No. 269A-D 247D-T

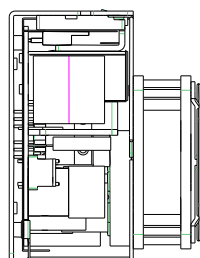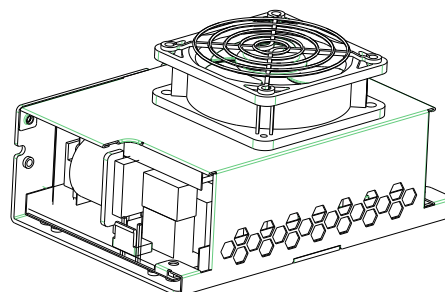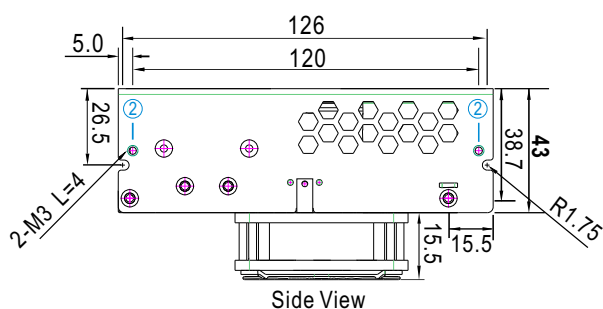


Side View

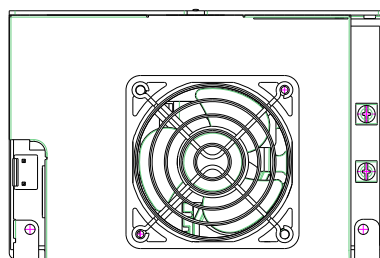


Top View

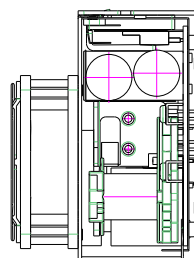

Side View

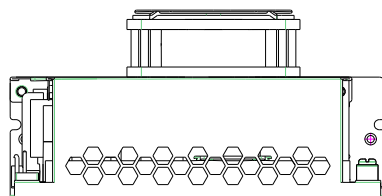

Side View


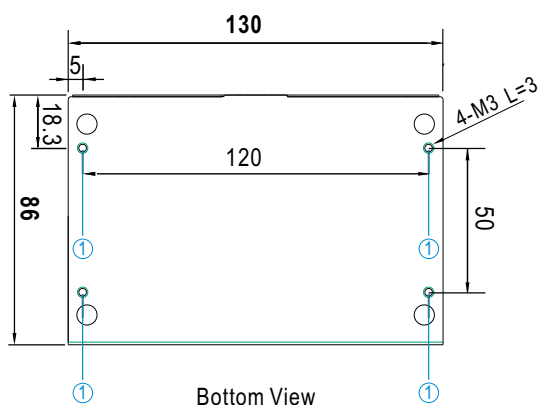





500W 5"×3" Reliable Green Medical Power Supply **RPS-500** series

● RPS-500-SF (Enclosed type with fan on the side)


Case No. 248B

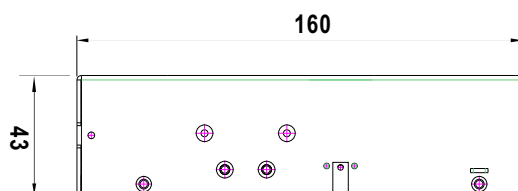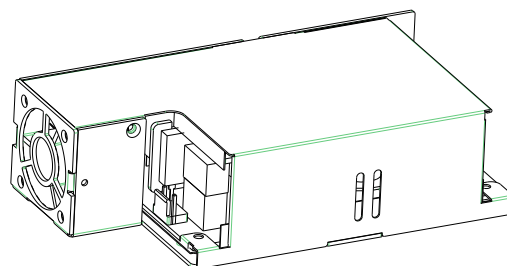


Side View

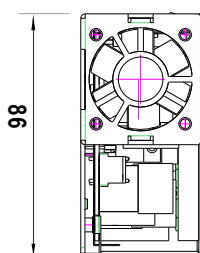


Side View

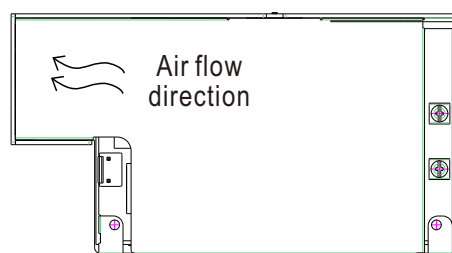


Top View

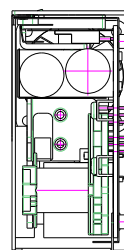

Side View

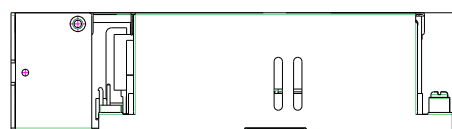

Side View

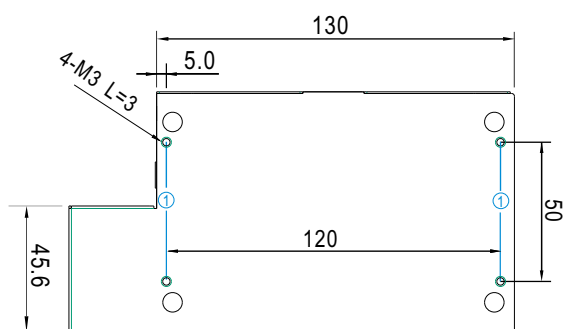


Bottom View



500W 5"×3" Reliable Green Medical Power Supply **RPS-500** series

※ Mounting Instruction for -C/-TF/-SF Type

Hole No.	Recommended Screw Size	MAX. Penetration Depth L	Recommended mounting torque
①	M3	3mm	4~6Kgf-cm
②	M3	4mm	4~6Kgf-cm

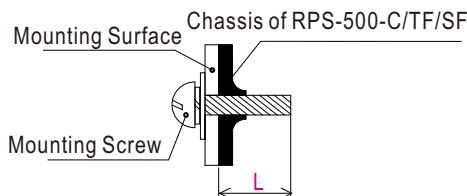

※ CONNECTION

AC Input Connector (CN1) : JST B3P-VH or equivalent

Pin No.	Assignment	Mating Housing	Terminal
1	AC/L	JST VHR or equivalent	JST SVH-21T-P1.1 or equivalent
2	No Pin		
3	AC/N		

Function Connector(CN11): TKP DH2L-2X2 or equivalent

Pin No.	Assignment	Mating Housing	Terminal
1	-S	TKP DH2 or equivalent	TKP or equivalent
2	+S		
3	DC COM		
4	PG		

DC Output Connector (CN2,CN3)

Pin No.	Assignment	Output Terminals
CN2	-V	M3.5 Pan HD screw in 2 positions Torque to 8 lbs-in(90cNm)max.
CN3	+V	

Function Connector(CN95): TKP DH2L-2X2 or equivalent

Pin No.	Assignment	Mating Housing	Terminal
1	5Vsb	TKP DH2 or equivalent	TKP or equivalent
2,4	DC COM		
3	PS-ON		

⚠ HS1,HS2,HS3,HS4 can not be shorted

FAN Connector(CN12) : TKP 8812-2 or equivalent
(Except for RPS-500-TF/SF)

Pin No.	Assignment	Mating Housing	Terminal
1	DC COM	TKP 2502 or equivalent	TKP 8811 or equivalent
2	+12V		

- ※ Note: 1. The enclosed type (-C/TF/SF type) models are not suitable for configuration within a Class II (without FG) system, but suggested within a Class I (with FG) system.
2. Mounting Instruction for enclosed type.

■ Installation Manual

Please refer to : <http://www.meanwell.com/manual.html>